
HOW TO MAKE UP 2109/1 SCANDI MEDIUM STOCKINGS PANEL

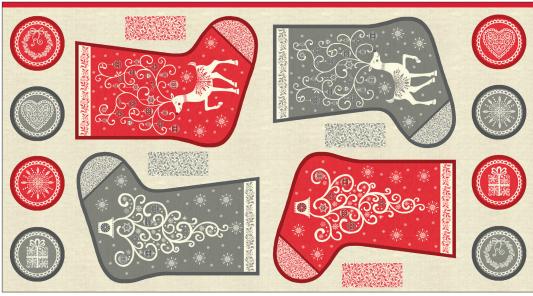




For each stocking you will need:

- One printed 2109/1 Scandi Stocking Panel
- Two pieces of wadding 12" x 16" for each stocking
- Two pieces of lining fabric 12" x 16" for each stocking
- One piece of backing fabric 24" x 44"





How To Make Scandi 2109/1 Panel

Please note that the seam allowance to join front and back together is 1cm.

Sewing Instructions

- 1. Make a tracing of the printed stocking along the seam line. Use this tracing to cut out two pieces of wadding. This means you won't have all that extra thickness in the seam allowance where it isn't needed.
- We suggest that you cut the 4 layers for each stocking at the same time because then you are sure they will match up exactly. To do this:
 - a. Place the back fabric right side down on a flat surface.
 - b. Then layer the two lining fabric layers with right sides together over the back fabric.
 - c. Finally place the printed stocking on top with the right side facing up.
 - d. Pin the layers together. Cut along the cutting line through all four layers.
- 3. Take a front (printed stocking) and a lining piece. Place right sides together and sew on the seam line across the top.
- 4. Place the unit down with the wrong sides facing up. Lay a piece of wadding on the back of the printed stocking with the edges within the seam lines.
- 5. Fold the lining over the wadding and line up the edges of the front and lining exactly. Pin and tack the layers together within the seam allowance.
- 6. Quilt as you fancy.
- 7. Repeat steps 4 to 6 with the back fabric and lining.
- 8. Take the front and back units and place right sides together. Pin, lining up the top and edges.
- 9. Sew the front and back together along the seam line. Now neaten the raw edges with stitch. Clip the seam allowances along the curves.
- 10. Turn right side out.
- 11. Make a loop out of the printed rectangle and attach the loop to the back of the stocking on the heel side.
- 12. Repeat the steps for all the other stockings.







Scandi Decorations

There are many ways to create these decorations but here are two methods you may like to consider.

- 1. Roughly cut out the motif. Spray baste and fuse to a piece of felt. Stitch along the seam line and any other lines you fancy. Use a rotary cutter with a fancy blade to cut the decorations out within the seam allowance. Attach a ribbon loop.
- 2. Roughly cut out the motif. Use Heat 'n Bond Ultra (or similar) to fuse the motif and a piece of coordinated fabric to the back. Use a rotary cutter with a fancy blade to cut the decorations out within the seam allowance. Attach a ribbon loop.



2110/R Advent Calendar 2110/S (Each panel 24" x 44" / 60 x 112cms)